HYDRAULIC PUNCHES

20 & 35 Ton



- Punch smooth, precise holes in seconds; much faster than drilling.
- and service applications, or can be mounted on a workbench for production jobs. Has carrying handle for precise locating.
- Rugged, forged steel "C" frame for great strength and durability.
- Dual action, spring loaded stripper holds material during punching operation, strips material from punch on return. Scribe lines on stripper aid in locating the punch (HP 35 only).

- Double Acting prevents binding and speeds retraction (HP20 only).
- Fully portable for construction, maintenance The PE172 electric/hydraulic pump is an ideal power source.


No. HP35 - Punch only, includes metal case and die change tools. Wt., 42.5 lbs.


No. HP35S - Punch with punches and dies. Includes HP35 punch, metal case and 250459 punch/die set. Wt., 44.0 lbs.

No. HP35P - Punch set with pump. Same as HP35SP, but does not include punch/die set. Wt., 86.3 lbs. NOTE: Available in 220 volt, 50 Hz. Order with suffix "-220".

No. HP35SP - Punch set with pump. Includes HP35 punch, PE172 electric/hydraulic pump, 9756 hose, 9798 hose half coupler, 250459 punch/die set, metal case. Wt., 87.8 lbs. NOTE: 220 volt, 50 Hz. Order with suffix "-220".

No. 250459 - Punch/die set for round holes. Includes one each: PD437 7/16" punch/die, PD562 9/16" punch/die, PD688 11/16" punch/die, PD812 13/16" punch/die. Wt., 1.5 lbs.

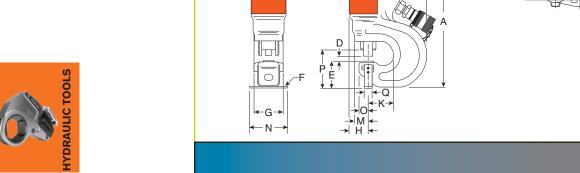

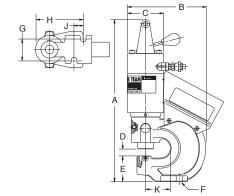

4		Order	Max.		Max.	^	В				Mtng. Holes	5	н		ax. Th Depth		M	NI	0	P	Ω
,	Сар.		Oper. Press.		Material Thickness			C (in.)			r (in.)			(in.)	(in.)	(in.)	(in.)	(in.)			
	35	HP35	10,000 psi	4.6 cu.in.	1/2	13³/₄	9	3³/₄	9/16	27/8	1/4	3	1 13/16	_	213/16	21/4	11/2	31/2	⁷ / ₈	4	3/4


No. HP20 – Basic punch. Wt., 33 lbs. **No. HP20S** – Punch frame with cylinder, valve, handle, two coupling nuts, plus five punch and die sets in 1/4", 5/16", 3/8", 7/16", and 17/32" dia. Wt., 35.0 lbs.

No. HP20SP* – Complete punch set with PE102A pump (115V, 50/60 Hz), 9682 nipple, two 9792 female couplers and two 9793 male couplers. Also includes two 9758 10' hoses, 9680 coupling, and same punch and die sets as in HP20S (above). Tool is completely assembled and pre-filled with oil. In storage box. Wt., 83.0 lbs.





HP20

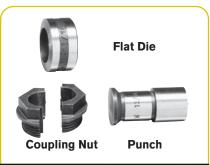

TYPICAL 20 TON STYLE TOOLING PUNCH/DIE SETS FOR HP20 & HP35 HYDRAULIC PUNCHES For use with For use with HP20 HP35 Hvd. Punch Hydraulic Punch Punch Punch Punch Flat Die Bevel Coupling Punch/w Flat Punch/w **Punch INCHES** MM Die No. Nut No. Die Set **Bevel Die Set** Size (in.) No. No. Bolt Hole Dia. Bolt Size (in.) Hole Dia. 252001 251970 | 251983 1/4 #10 6.3 251971 251984 252001 PD313 5/16 5/16 5/16 1/4 7.9 252001 PD375 PD375B 3/8 251972 251985 251996 3/8 3/8 5/16 9.5 **M8** \bigcirc 251973 251986 251997 252001 PD437 PD437B 7/16 7/16 3/8 7/16 M10 11.2 17/32 251974 251987 251998 252001 PD531 PD531B 17/32 17/32 Round 7/16 13.5 M12 251975 251988 251999 252001 PD562 PD562B 9/16 9/16 1/2 9/16 14.3 11/16 11/16 5/8 251976 251989 252001 PD688 11/16 M16 17.5 25/32 25/32 251977 251990 252002 PD781 25/32 19.8 M18 13/16 13/16 3/4 13/16 251978 251991 252002 PD812 20.6 1/2 251979 251992 252002 17/32 251980 251993 252002 Square 252002 251981 251994 $1/_4 \times 3/_4$ Obround 251982 251995 252002 3/8 X 3/4





ACCESSORIES FOR HP20 HYDRAULIC PUNCH

No. HP20FS – Optional foot switch mounted in foot switch guard. Supplied with 10 foot cord and male remote connector. Wt., 2.0 lbs.

No. HP20HS – Optional handswitch. Supplied with 10 foot cord and male remote connector. Wt., 2.0 lbs.

No. 252000 – Optional coupling nut wrench. Makes punch/die changes easier without "rounding-off" coupling nuts. Wt., 0.5 lbs.