

## CLASSIC SERIES ELECTRIC HYDRAULIC PUMP

PE55TWP-BS  
700 bar/10,000 psi



## 700 BAR (10,000 PSI) CLASSIC SERIES ELECTRIC HYDRAULIC PUMP

The PE55TWP-BS has been the market leading electric pump for over 30 years & is therefore tried & tested. A simple, light-weight design with a recent upgrade that has created a cost-effective workhorse.

### Quality means Lower Life-Cycle Costs:

- Over 100,000 cycles
- Continuous duty up to 50°C (122°F) ambient
- Proven design = Proven reliability

### Enhanced Usability:

- Two Speed High Performance pump
- Retract side internal relief valve protects tool
- Hand remote
- Four-tool manifold (-4 models only) allow use of up to four tools simultaneously
- 4" calibration capable gauge
- Use with single or double acting tools

### Designed with Safety in Mind:

- Easily adjusted pressure regulator (relief) valve
- 103 bar (1,500 psi) pressure retract relief valve

### DESIGNED FOR

Electric



Air



Gas



Hand



MAINTENANCE  
& REPAIR

ORIGINAL  
INSTALL

Split



Tension



Torque



Max  
Flow



## Specifications and Dimensional Data

**Size (L x W x H):** 147 cm x 24 cm x 49 cm  
18.5" x 9.5" x 19.2"

**Weight:** 29.5 kg (65 lb) [without oil]

**Maximum Oil Capacity:** (vented reservoir)  
6.8 L (1.8 Gallons) [to fill line]  
5.3 L (1.4 Gallons) [usable]

**Operating Environment:** -25°C to +50°C  
(-13°F to +122°F)


(When operating near temperature extremes, it is recommended to use hydraulic oils that are rated for those temperatures. Refer to service manuals and cooling options)

**Sound Level:** 87-92 dBA (max)

**Pressure:** 0 - 700 bar (0 - 10,000 psi)

**Typical Flow:** 11.5 L/min - 0.9 L/min  
(704 in<sup>3</sup>/min - 56 in<sup>3</sup>/min)

**Power:** 1-1/8 hp Universal Motor  
110/115V - 50/60 Hz (25 amps)  
220/230V - 50/60 Hz (13 amps)

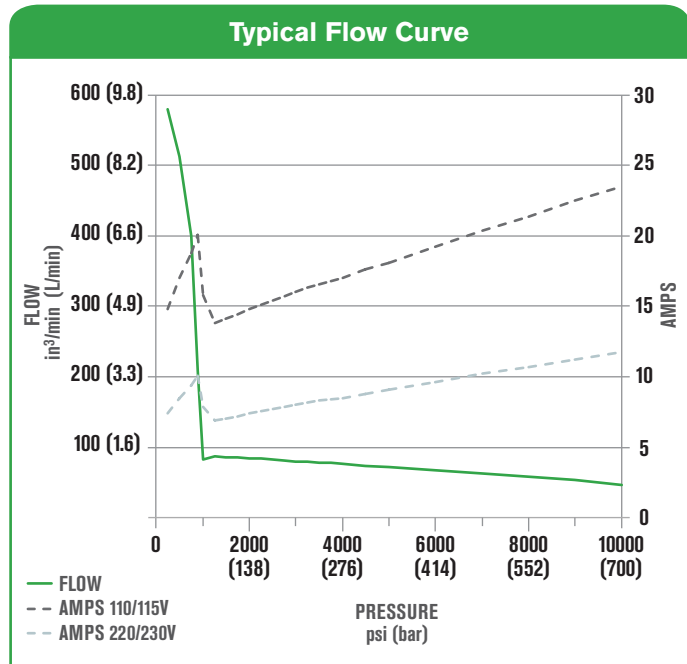

Order No.	Oil Delivery per min.	Oil Reservoir gal	Usable Oil in <sup>3</sup>	Overall Width	Overall Length	Overall Height	Pump Weight w/Oil
PE55TWP-BS PE55TWP-220-BS	704 in <sup>3</sup> @ 100 psi 11.5 L/min @ 6.9 bar 56 in <sup>3</sup> @ 10,000 psi 0.9 L/min @ 700 bar	2.5	324	17.14" 435 mm	9.5" 241 mm	18.12" 460 mm	75 lb 34 kg
PE55TWP-4-BS PE55TWP-4-CF-BS PE55TWP-4-220-BS	704 in <sup>3</sup> @ 100 psi 11.5 L/min @ 6.9 bar 56 in <sup>3</sup> @ 10,000 psi 0.9 L/min @ 700 bar	2.5	324	18.49" 470 mm	9.5" 241 mm	19.15" 487 mm	78 lb 35.5 kg

### Electrical Data

	Electric Motor	Electrical Control
PE55TWP-BS PE55TWP-4-BS PE55TWP-4-CF-BS	1-1/8 hp, 12000 rpm 110/150V, 50/60Hz, 25 amps	Remote control with 20-foot cord
PE55TWP-220-BS PE55TWP-4-220-BS	1-1/8 hp, 12000 rpm 220/230V, 50/60Hz, 13 amps	

### Ordering Information

Order No.	Description
PE55TWP-BS	110/115V, 50/60 Hz, Single Tool
PE55TWP-4-BS	110/115V, 50/60 Hz, 4 Tool
PE55TWP-4-CF-BS	110/115V, 50/60 Hz, 4 Tool, with Cooling Fan
PE55TWP-220-BS	220/230V, 50/60 Hz, Single Tool
PE55TWP-4-220-BS	220/230V, 50/60 Hz, 4 Tool

Contact factory for CE pump options