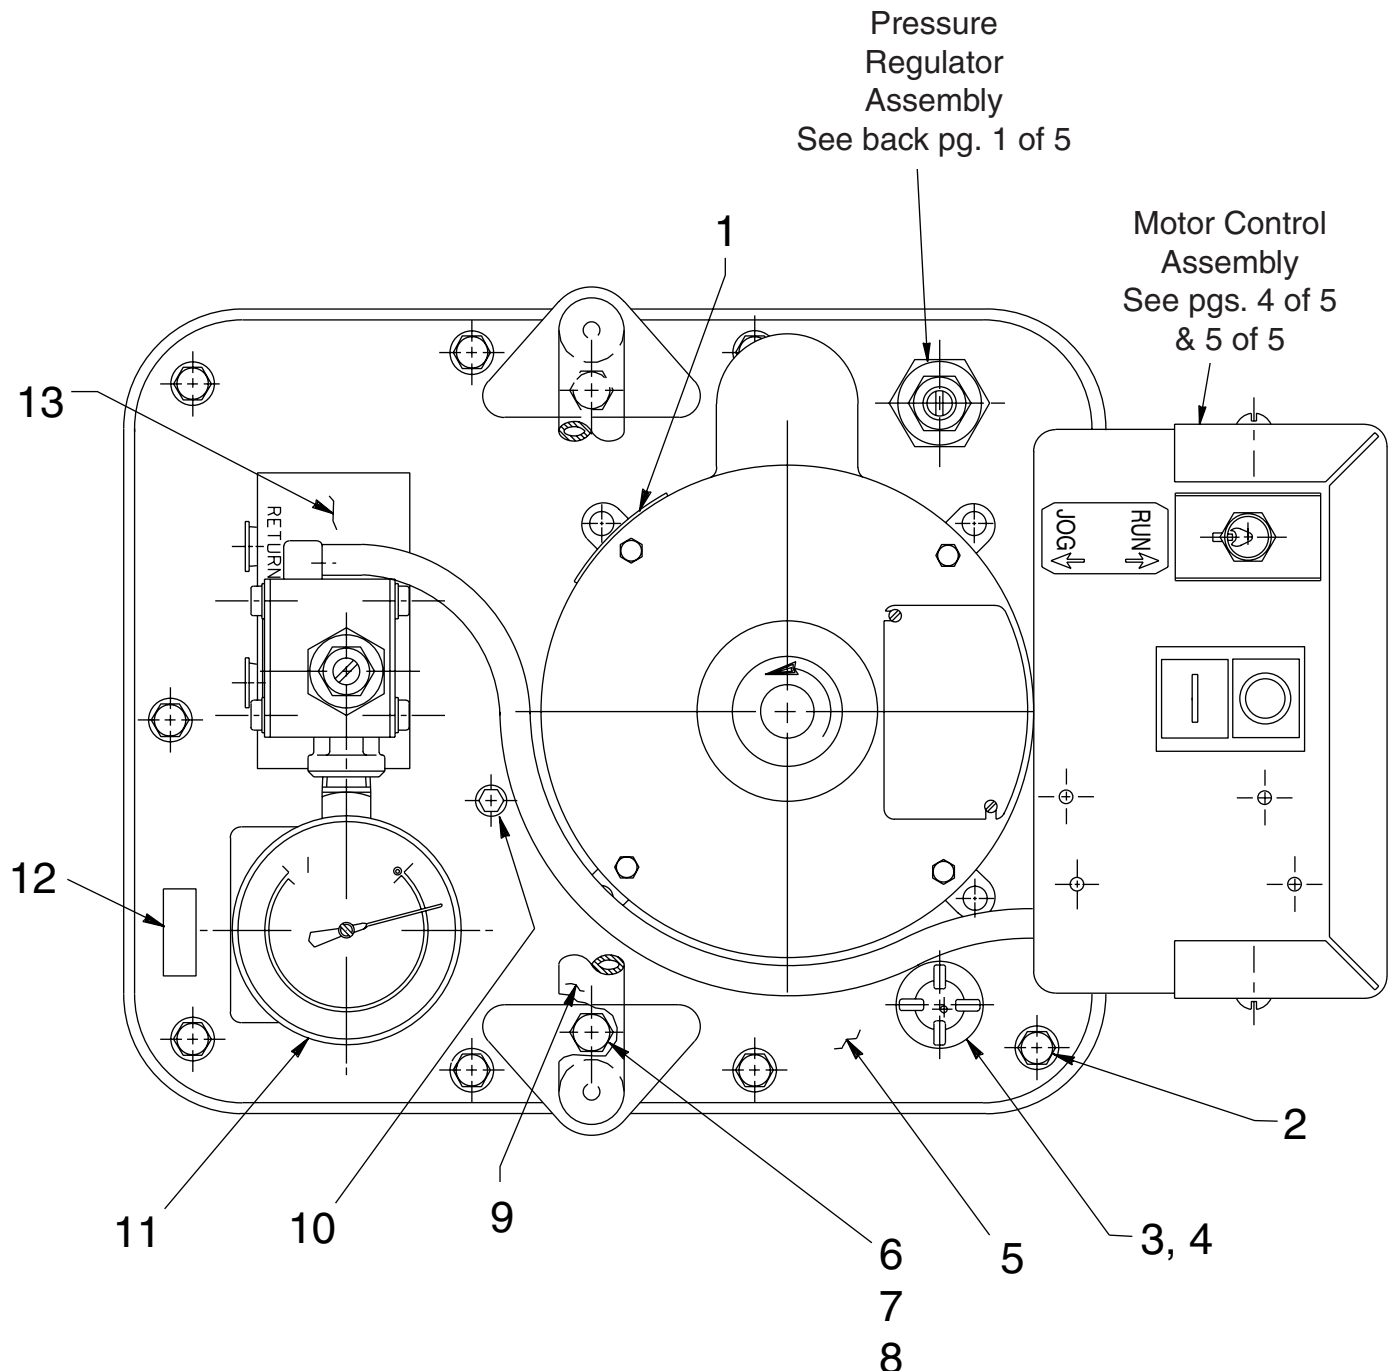



Parts List for:

100179
100179-230**MODEL B**
ELECTRIC HYDRAULIC PUMP
TOP VIEW

Item No.	Part No.	No. Req'd	Description
1	*304850	1	Warning Decal
2	209799	10	Self Tapping Screw (Torque to 50/60 in. lbs.)
3	20937	1	Filler/Vent Plug
4	200415	1	O-ring (Square Section)
5	46064	1	Cover Plate
6	12825	2	Cap Screw (1/4-20 x 5/8 Lg.; Torque to 60/80 in. lbs.)
7	10245	2	Lockwasher
8	10199	2	Hex Nut (1/4-20)
9	47492	1	Handle
10	10030	1	Cap Screw (1/4-20 x 1/2 Lg.; Torque to 220/240 in. lbs.)
11	17946	1	Gauge
12	203972	1	Decal (CSA approval)
13	420029	1	Manifold Body

Part numbers marked with an asterisk (*) are contained in Repair Kit No. 300430.

PRESSURE REGULATOR ASSEMBLY

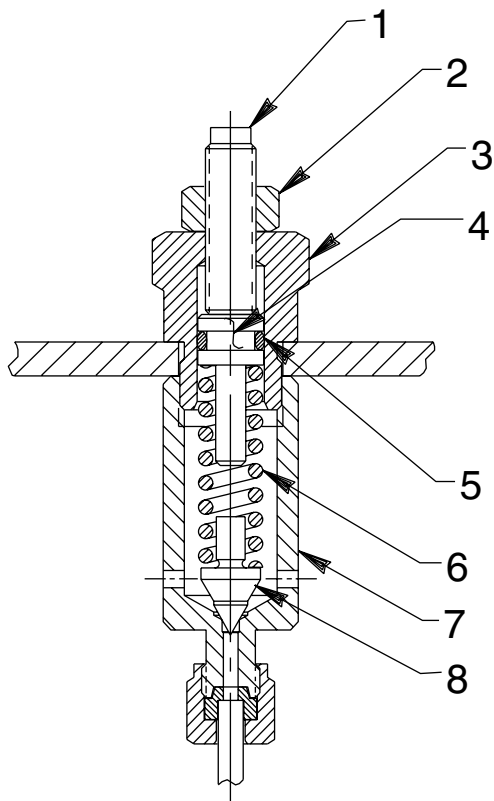


Item No.	Part No.	No. Req'd	Description
1	22362	1	Adjusting Screw
2	10386	1	Locknut (3/8-24)
3	21305	1	Valve Cap
4	21306	1	Spring Guide
5	10268	1	O-ring (1/2 x 3/8 x 1/16)
6	10495	1	Compression Spring
7	22361	1	Pressure Regulator Body
8	21046	1	Poppet

Refer to any operating instructions included with this product for detailed information about operation, testing, disassembly, reassembly, and preventive maintenance.

Items found in this parts list have been carefully tested and selected. **Therefore: Use only genuine Hytec replacement parts!**

Additional questions can be directed to our Technical Services Department.

SIDE VIEW

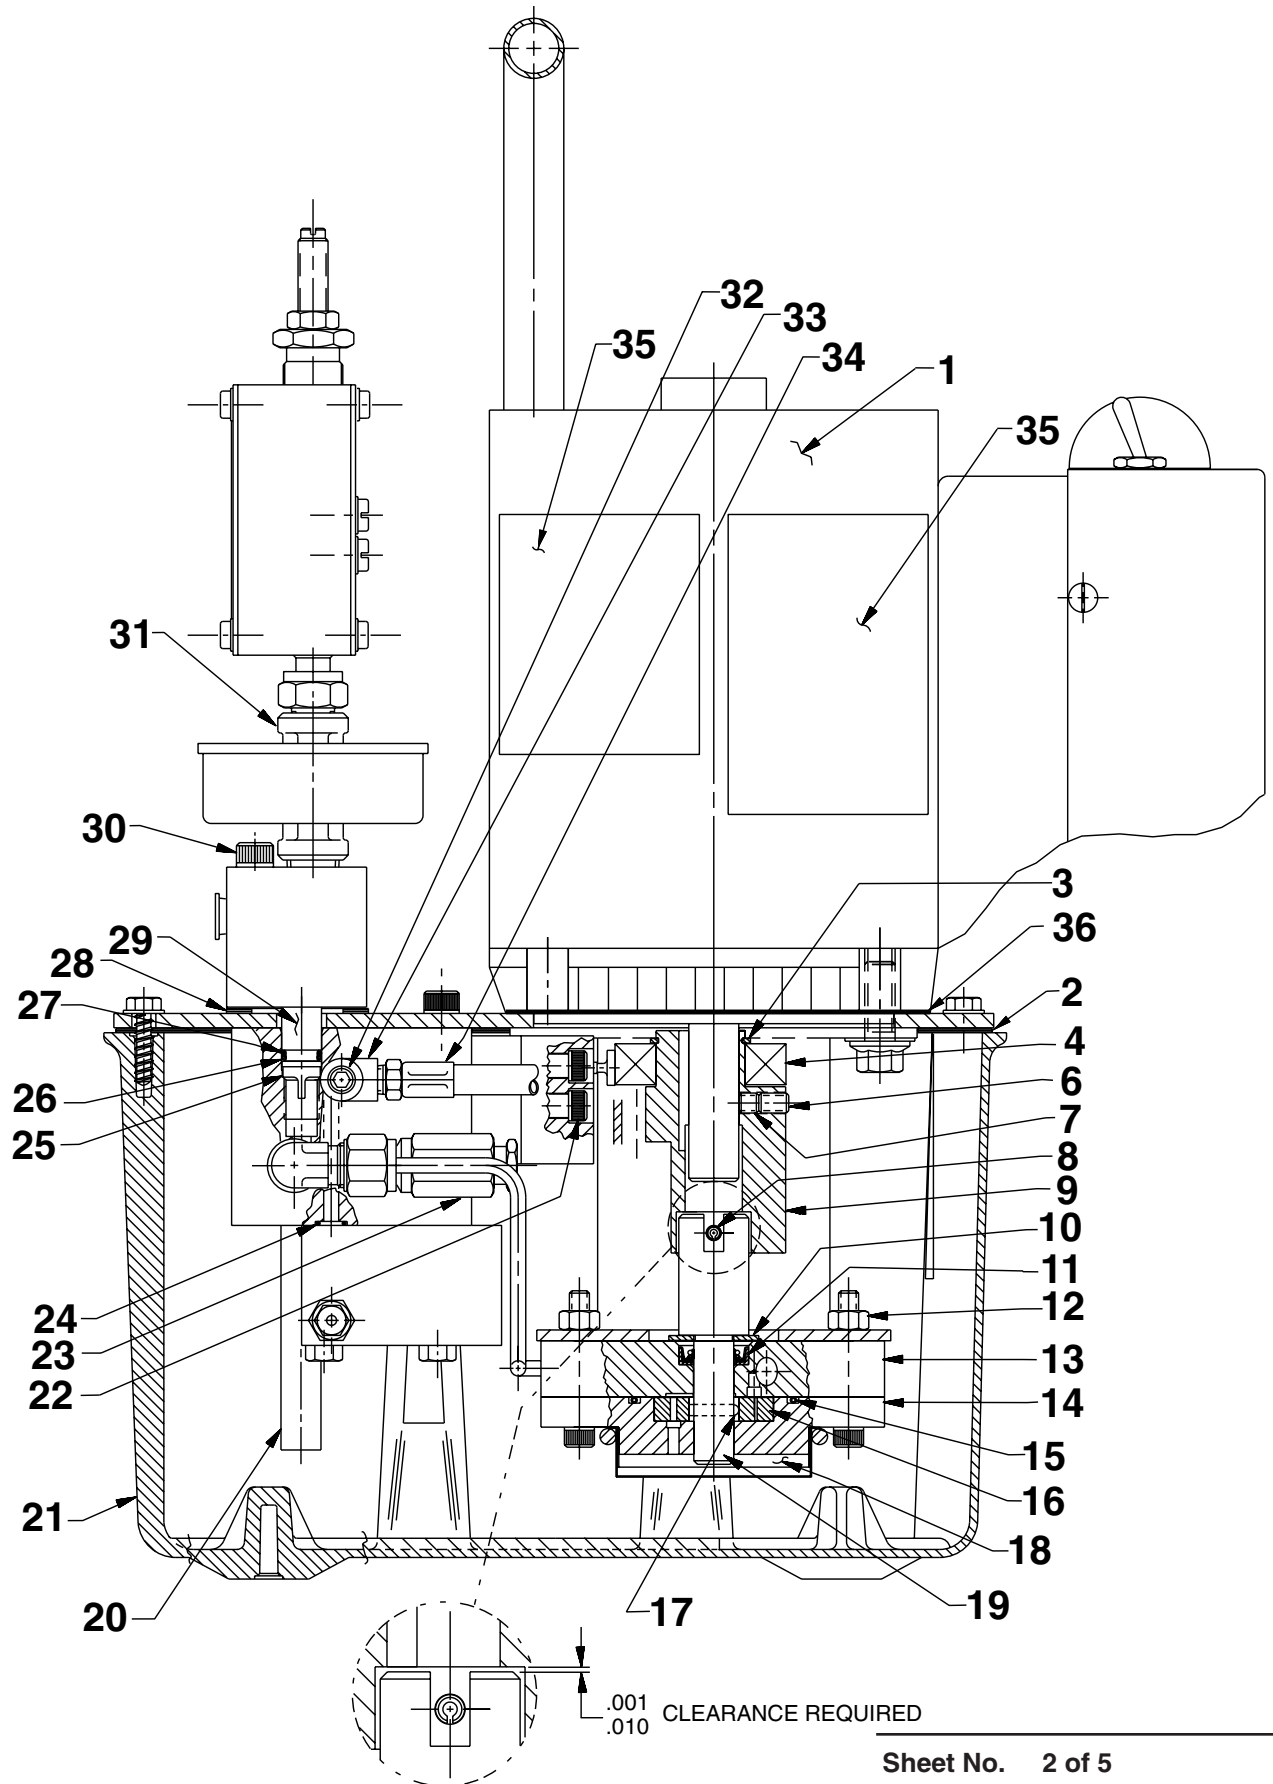

Parts List, Form No. 101495, Back sheet 2 of 5



Item No.	Part No.	No. Req'd	Description
1	58196WH2	1	Electric Motor
2	*40164	1	Gasket
3	209798	1	Retaining Ring
4	209805	1	Bearing
6	10519	1	Set Screw (1/4-20 x 3/8 Lg.; Torque to 60/80 in. lbs.)
7	10136	1	Set Screw (1/4-20 x 1/4 Lg.; Torque to 60/80 in. lbs.)
8	10973	1	Slotted Spring Pin (3/16 O.D. x 1-1/4 Lg.) NOTE: Locate slot as shown in detail.
9	45596	1	Eccentric
10	12595	1	Washer
11	*304830	1	Oil Seal
12	10199	2	Hex Nut (1/4-20)
13	61170	1	Upper Gerotor Housing
14	61169	1	Lower Gerotor Housing
15	*10922	1	O-ring (2-1/8 x 1-15/16 x 3/32)
16	304826	1	Gerotor Set
17	209794	1	Pin
18	21846	1	Filter Support
19	304835	1	Drive Shaft
20	200609	1	Drain Tube
21	61165	1	Reservoir
22	10022	4	Cap Screw (1/4-20 x 1-1/2 Lg.; Torque to 180/200 in. lbs.)
23	21278-50	1	Relief Valve (Set at 5,100/5,700 PSI)
24	*10266	1	O-ring (3/8 x 1/4 x 1/16)
25	209795	1	Outlet Ball Stop
26	*10268	2	O-ring (1/2 x 3/8 x 1/16)
27	*11863	2	Backup Washer
28	*304829	1	Gasket
29	202505	1	Bushing
30	209945	2	Soc. Hd. Cap Screw (5/16-18 UNC x 2-1/2 Lg.; Torque to 220/240 in. lbs.)
31	10618	1	Tee Fitting
32	10427	1	Pipe Plug (1/8 NPTF)
33	19463	1	Tee Fitting (Brass)
34	304819	1	Hose Assembly
35	200188	1	Warning Decal
36	351060	1	Gasket

PARTS INCLUDED BUT NOT SHOWN

309233	2	Trade Name Decal
100909	1	Quick Coupler Set

Part numbers marked with an asterisk (*) are contained in Repair Kit No. 300430.

BOTTOM VIEW

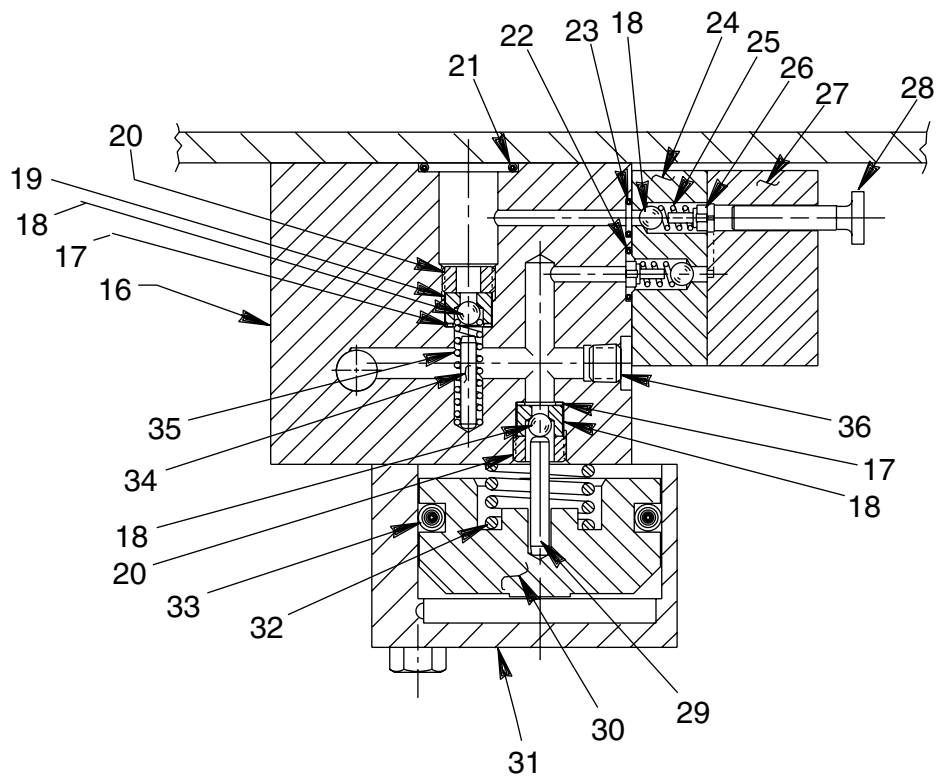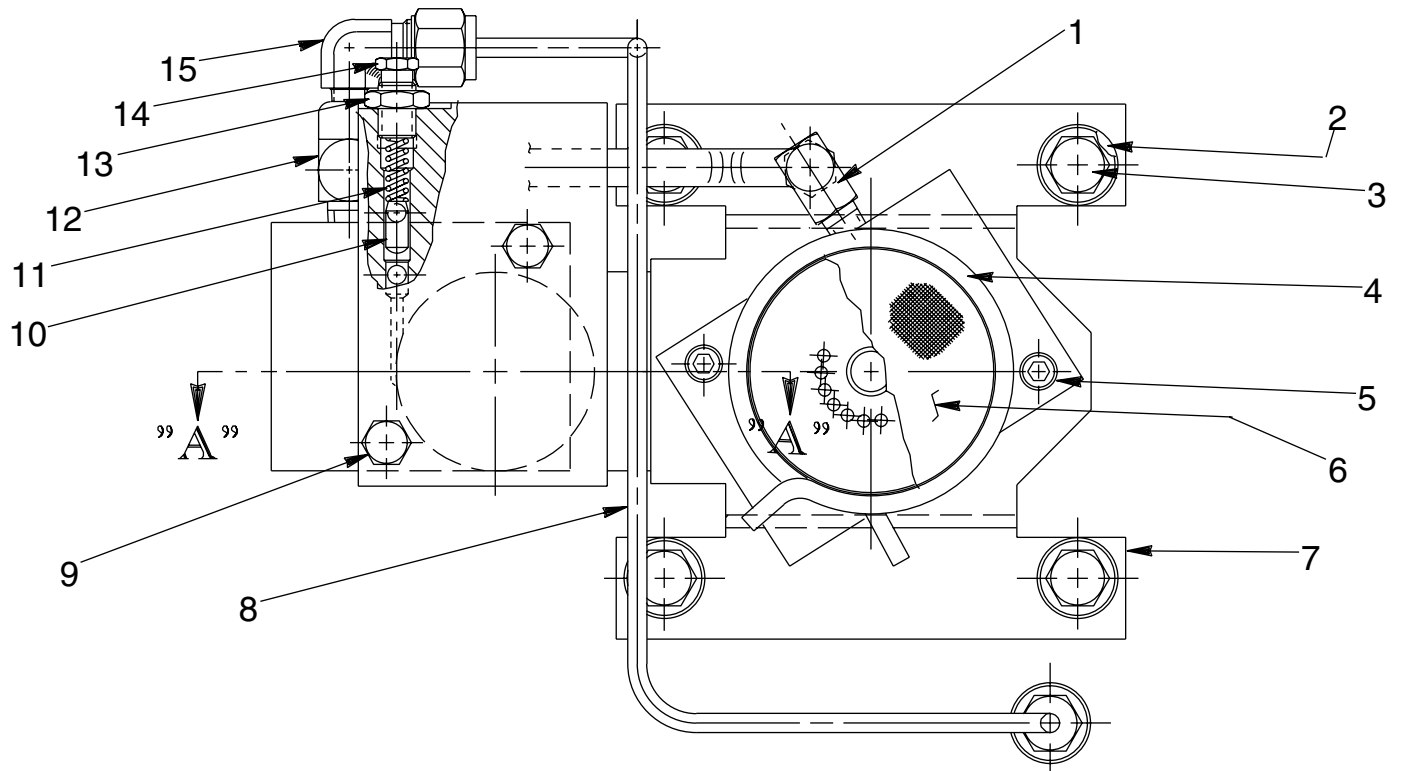



SECTION A-A

Item No.	Part No.	No. Req'd	Description	Item No.	Part No.	No. Req'd	Description
1	14440	1	90° Elbow Fitting	18	*12223	4	Ball (3/16 dia.)
2	10258	4	Washer (13/16 x 3/8 x 1/16)	19	*209787	2	Replaceable Seat
3	213663	4	Flange Hd. Screw (3/8-16 x 1" Lg.; Torque to 230/250 in. lbs.)	20	209797	2	Hollow Lock Screw (7/16-20; Torque to 180/200 in. lbs.)
4	11461	1	Clamp Ring	21	*10273	1	O-ring (13/16 x 5/8 x 3/32)
5	10854	2	Cap Screw (Torque to 60/80 in. lbs.)	22	*14763	1	O-ring
6	21608	1	Filter	23	*10265	1	O-ring (5/16 x 3/16 x 1/16)
7	52174	1	Bracket	24	45559	1	High Pressure Check Block
8	306171	1	Tube Assembly	25	*10445	2	Compression Spring
9	13037	2	Cap Screw (1/4-20 x 2" Lg.; Torque to 40/50 in. lbs.)	26	24549	1	Valve Guide
10	211080	1	Dowel Pin (1/4 O.D. x 1/2 Lg.)	27	45866	1	High Pressure Piston Block
11	*11221	1	Compression Spring	28	305526	1	High Pressure Piston
12	18969	1	Tee Fitting	29	211843	1	Dowel Pin (3/16 O.D. x 1" Lg.)
13	10386	1	Hex Locknut (3/8-24)	30	46063	1	Automatic Valve Piston
14	*29786	1	Adjusting Screw (Unloading Relief Valve)	31	52167	1	Automatic Valve Block
15	11278	1	90° Elbow Fitting	32	*16346	1	Compression Spring
16	61167	1	Check Body	33	*10283	1	O-ring (2" x 1-5/8 x 3/16)
17	*10442	2	Copper Washer (3/8 x 1/4 x 1/32)	34	12149	1	Dowel Pin (1/8 O.D. x 3/4 Lg.)
				35	*16057	1	Compression Spring
				36	15130	1	Pipe Plug (1/16 NPTF)

Part numbers marked with an asterisk (*) are contained in Repair Kit No. 300430.

HYDRAULIC SCHEMATIC

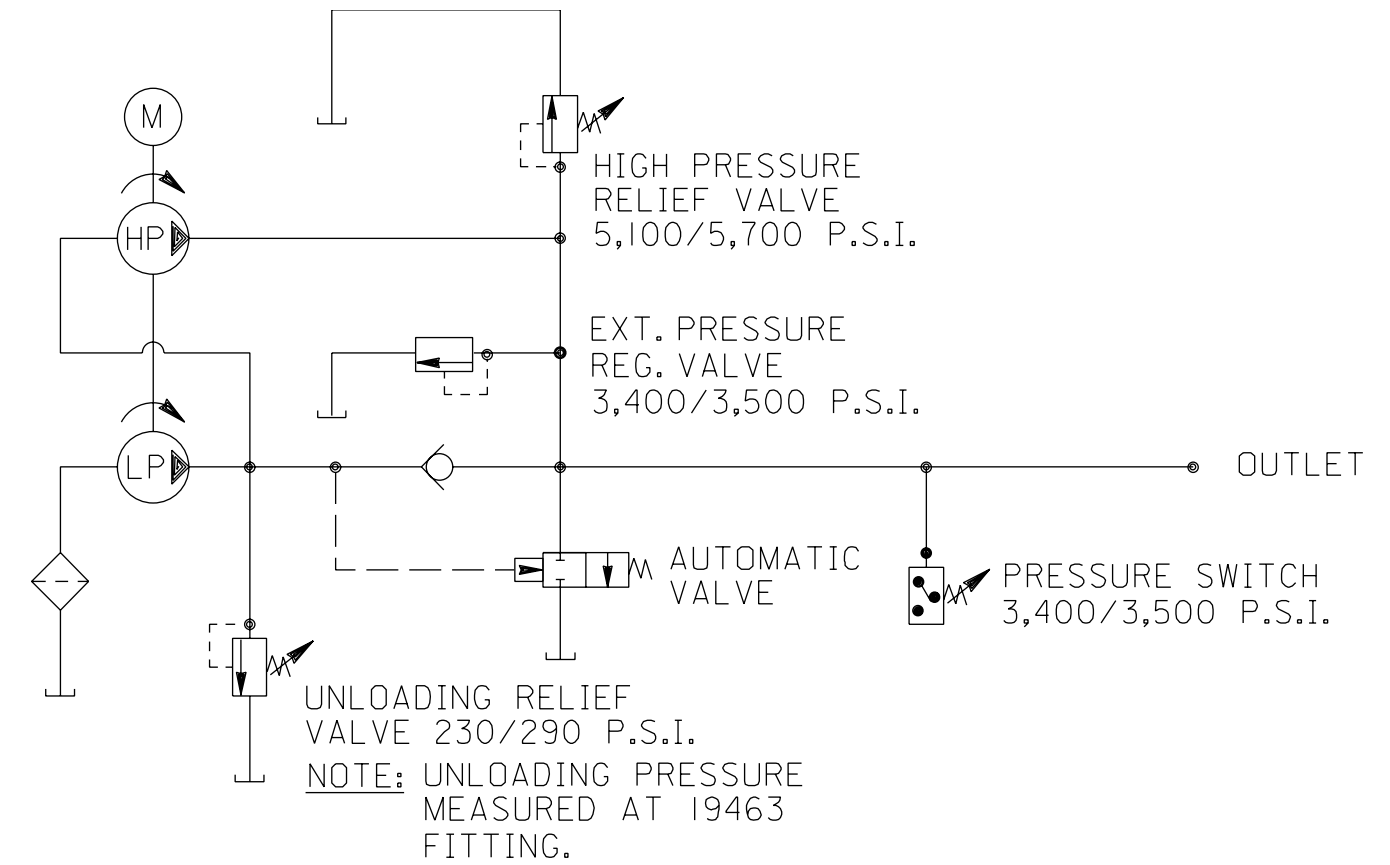

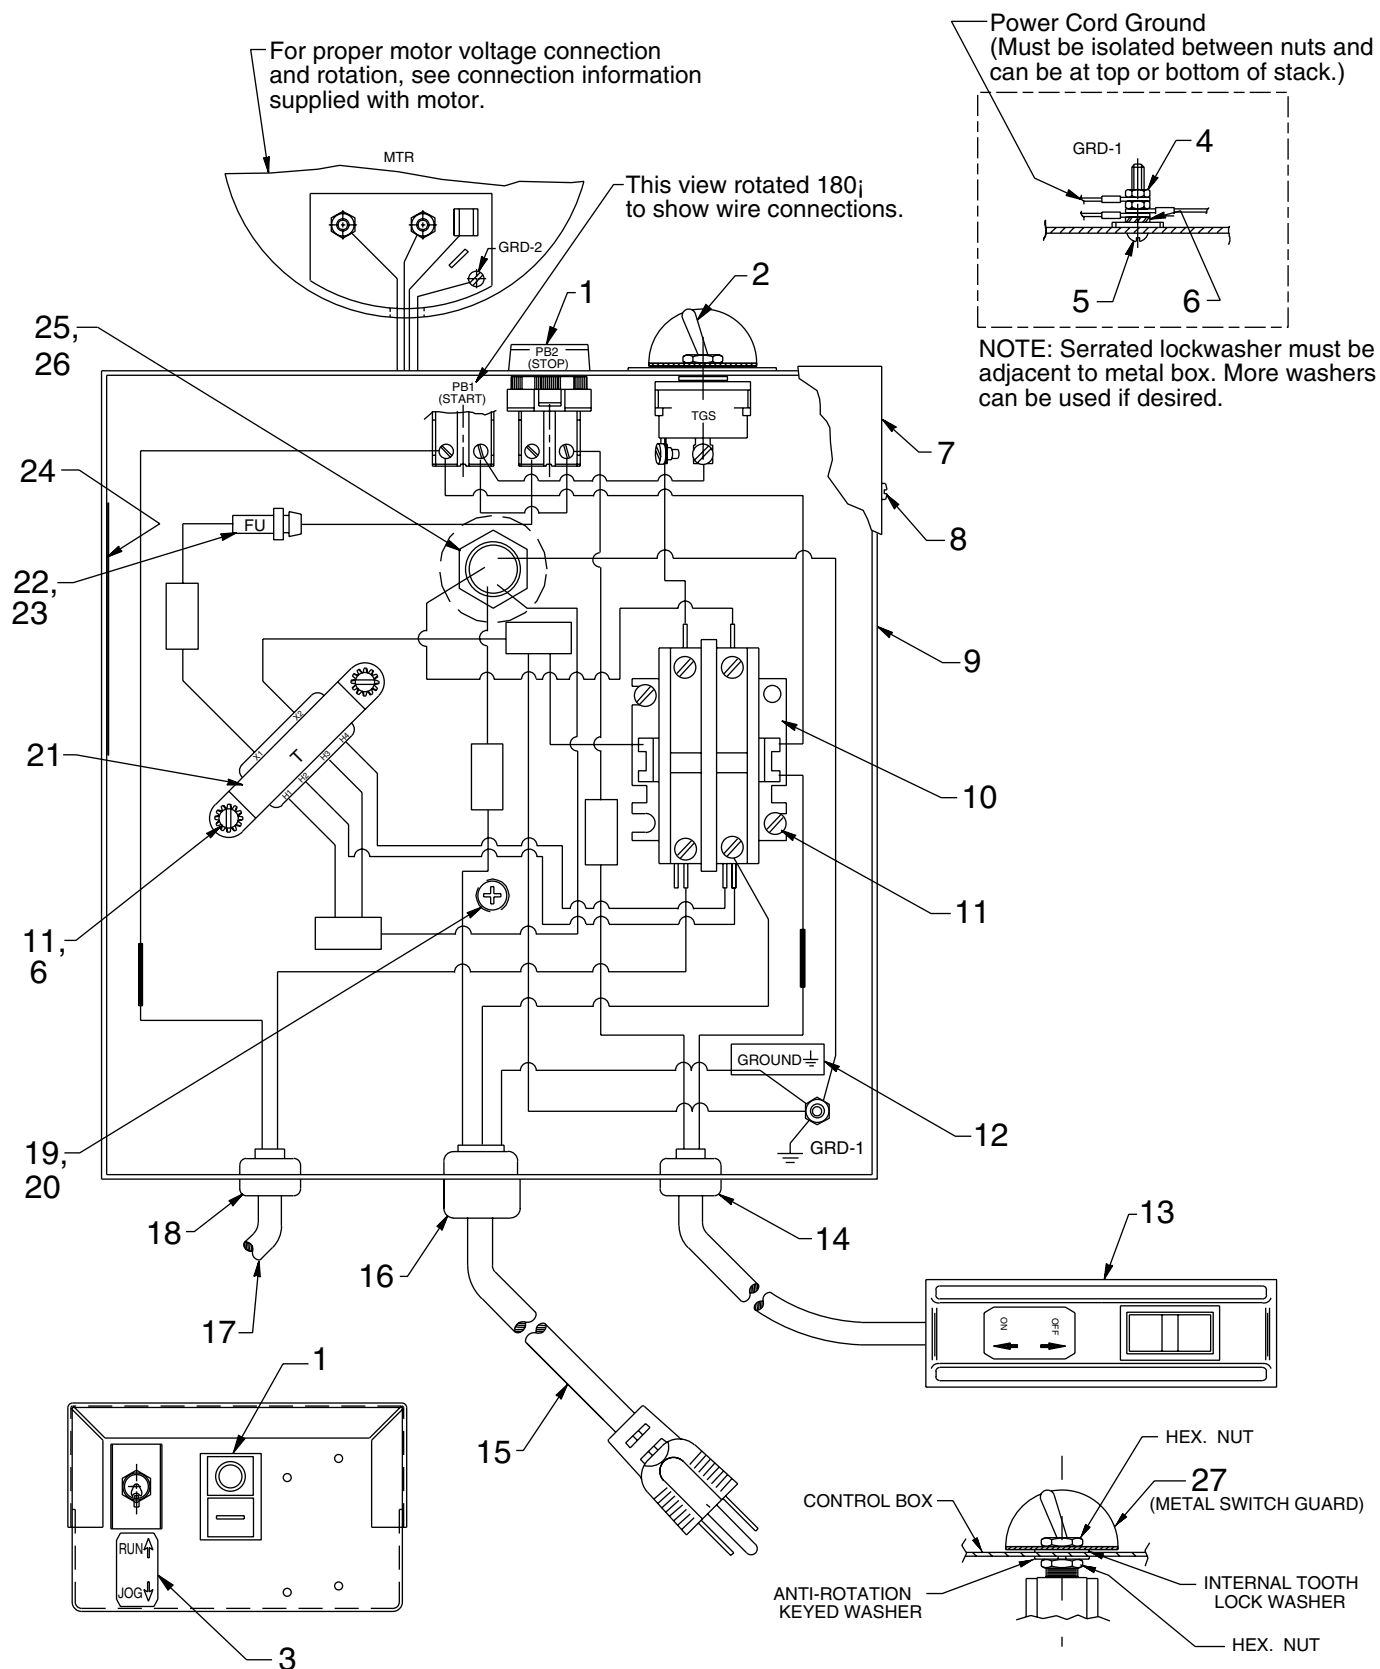MOTOR CONTROL ASSEMBLY FOR 100179**115 V., 60 Hz.**

Item No.	Part No.	No. Req'd	Description
1	309019	1	Push Button Switch
2	12301	1	Toggle Switch
3	352081	1	Decal (RUN - JOG)
4	10197	2	Hex. Nut (#10-24)
5	11856	1	Rd. Hd. Machine Screw (#10-24 x 1" Lg.)
6	11108	3	Washer (#10 External Tooth)
7	43126WH2	1	Motor Control Box Cover
8	14812	4	Pan Hd. Tapping Screw
9	51218WH2	1	Motor Control Box
10	420718-4	1	Contacto
11	11539	4	Rd. Hd. Machine Screw (#10-24 x 1/4 Lg.)
12	205189	1	Decal (Ground)
13	25017	1	Hand Switch (See Form No. 101644)
14	15993	1	Strain Relief Bushing
15	25229	1	Cord Set (14/3 SJT0)

Item No.	Part No.	No. Req'd	Description
16	210112	1	Strain Relief
17	52203	1	Pressure Switch Assembly
18	215857	1	Strain Relief Bushing
19	13532	1	Pan Hd. Tapping Screw (#8-32 x 3/8 Lg.)
20	206857	1	Washer
21	305665	1	Transformer
22	16887	1	Fuse Holder
23	206962	1	Fuse (3A)
24	250150	1	Decal (Fuse warning)
25	11202	1	Conduit Nipple
26	212434	1	Washer
27	352061	1	Metal Switch Guard

PARTS INCLUDED BUT NOT SHOWN


200188	1	Warning Decal
213695	1	Decal (Intermittent Duty)

115 V., 60 Hz




North American & International Color Codes

Conductors	North American	International
Line	Black	Brown
Neutral	White	Blue
Ground	Green	Green/Yellow

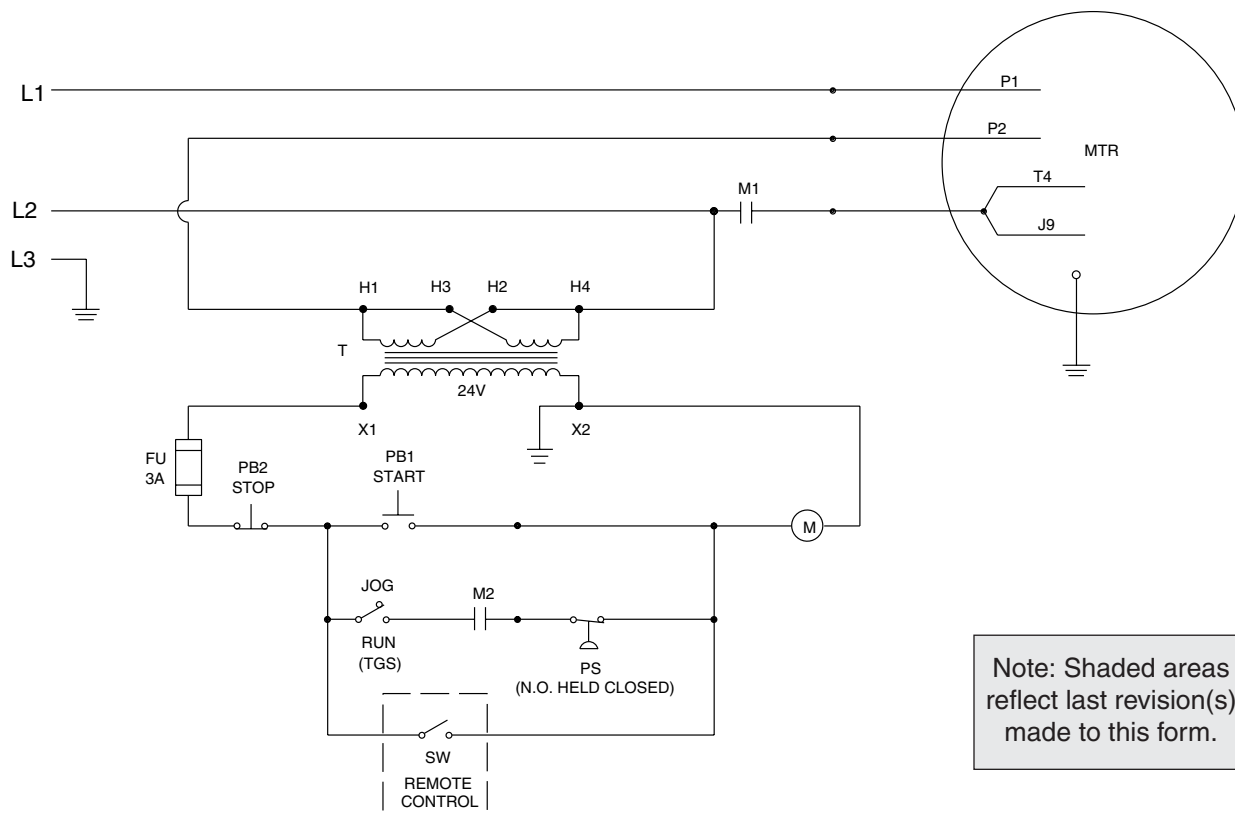

Note: Shaded areas reflect last revision(s) made to this form.

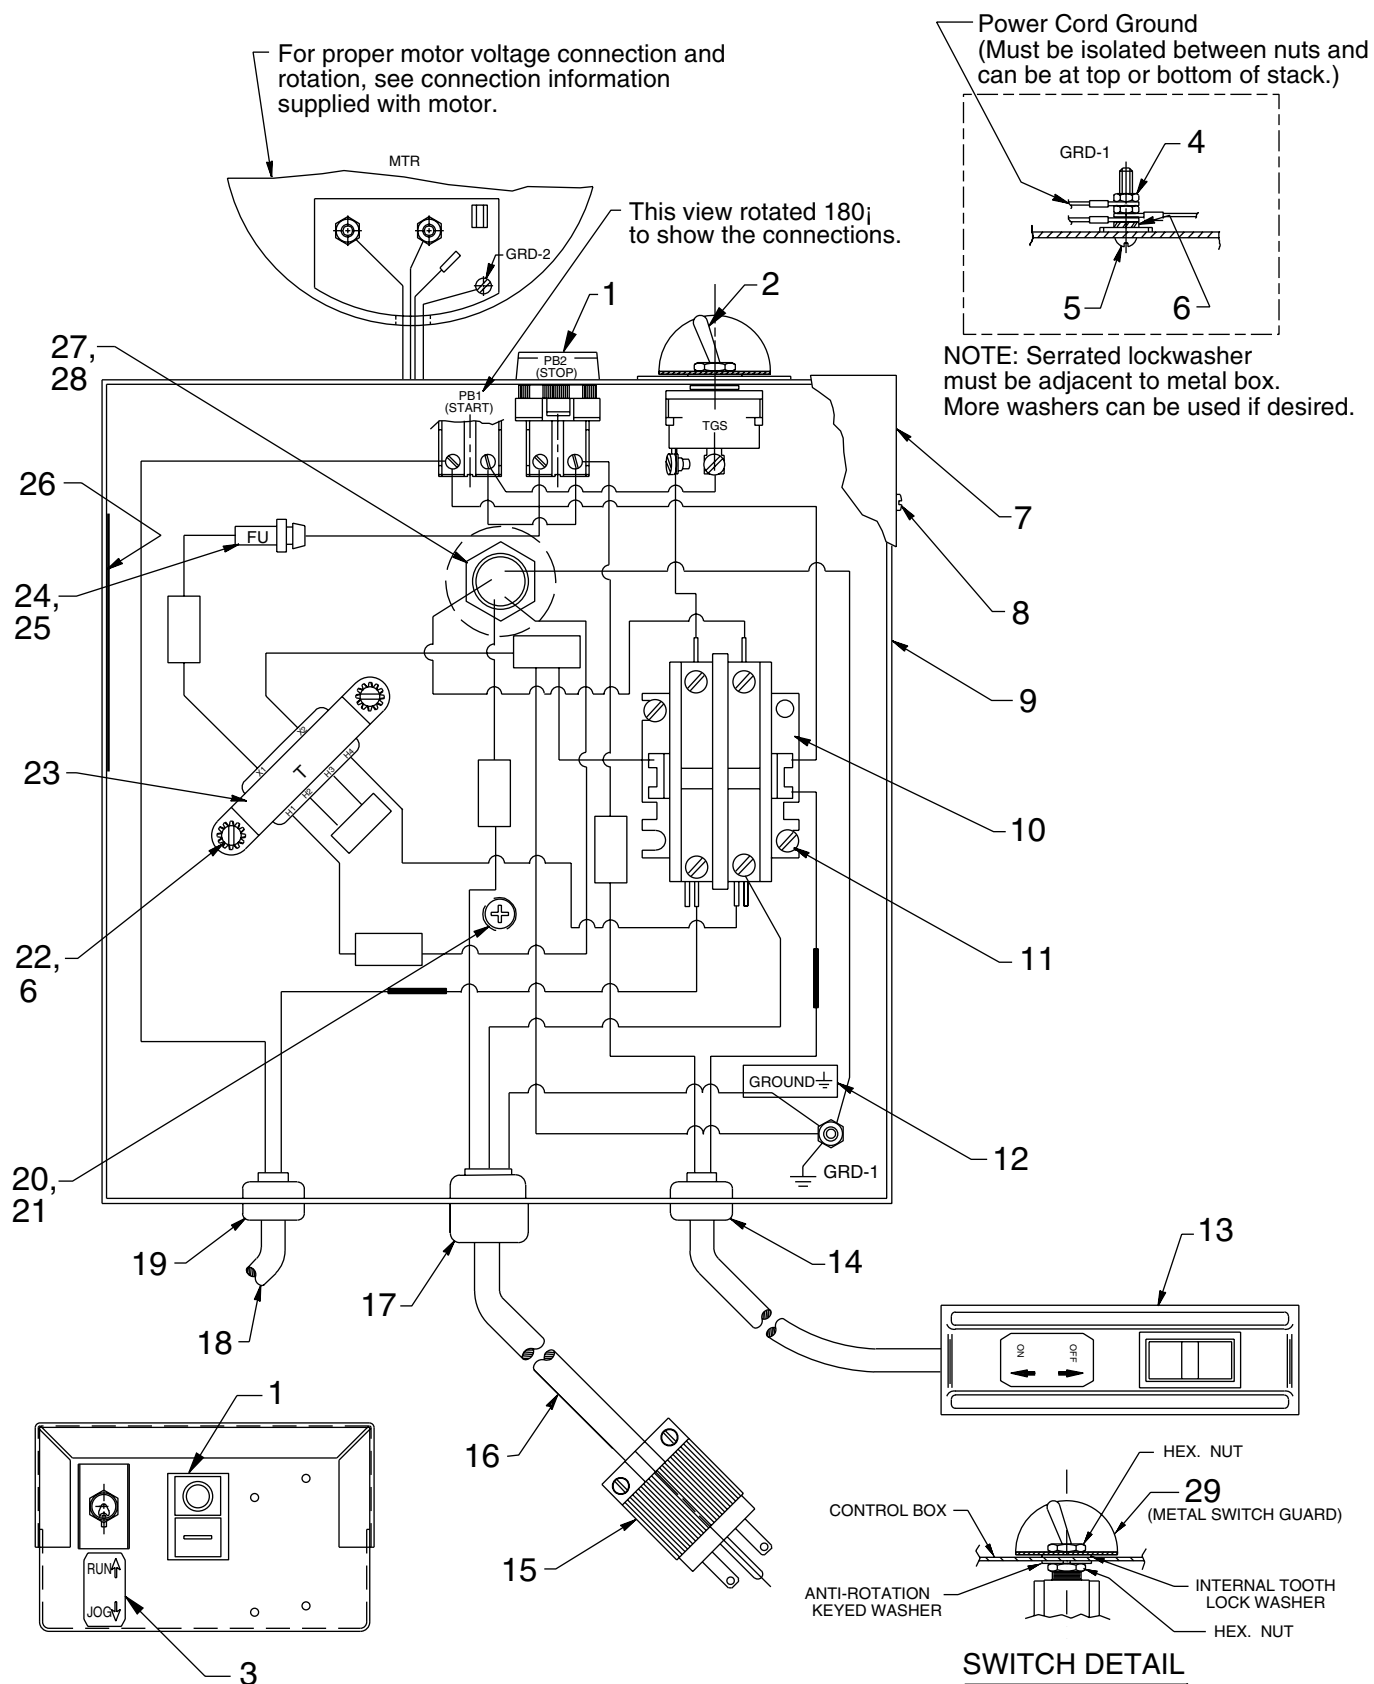MOTOR CONTROL ASSEMBLY FOR 100179-230**230 V., 60 Hz.****SWITCH DETAIL**

Sheet No. 5 of 5

Rev. 3

Date: 10 April 2001

Item No.	Part No.	No. Req'd	Description
1	309019	1	Push Button Switch
2	12301	1	Toggle Switch
3	352081	1	Decal (RUN - JOG)
4	10197	2	Hex. Nut (#10-24)
5	11856	1	Rd. Hd. Machine Screw (#10-24 x 1" Lg.)
6	11108	3	Washer (#10 External Tooth)
7	43126WH2	1	Motor Control Box Cover
8	14812	4	Pan Hd. Tapping Screw
9	51218WH2	1	Motor Control Box
10	420718-4	1	Contactor
11	10166	2	Machine Screw
12	205189	1	Decal (Ground)
13	25017	1	Hand Switch (See Form No. 101644)
14	15993	1	Strain Relief Bushing
15	11209	1	Electrical Plug
16	308752	8 ft.	Electrical Cable (14/3 SJT0)
17	210112	1	Strain Relief

Item No.	Part No.	No. Req'd	Description
18	52203	1	Pressure Switch Assembly
19	215857	1	Strain Relief Bushing
20	13532	1	Pan Hd. Tapping Screw (#8-32 x 3/8 Lg.)
21	206857	1	Washer
22	11539	2	Rd. Hd. Machine Screw (#10-24 x 1/4 Lg.)
23	305665	1	Transformer
24	16887	1	Fuse Holder
25	206962	1	Fuse (3A)
26	250150	1	Decal (Fuse warning)
27	11202	1	Conduit Nipple
28	212434	1	Washer
29	352061	1	Metal Switch Guard

PARTS INCLUDED BUT NOT SHOWN

200188	1	Warning Decal
213695	1	Decal (Intermittent Duty)

ELECTRICAL SCHEMATIC FOR 100179-230

230 V., 60 Hz.




WARNING

To help avoid personal injury, all electrical work must be done by a qualified electrician.

North American & International Color Codes

Conductors	North American	International
Line	Black	Brown
Neutral	White	Blue
Ground	Green	Green/Yellow

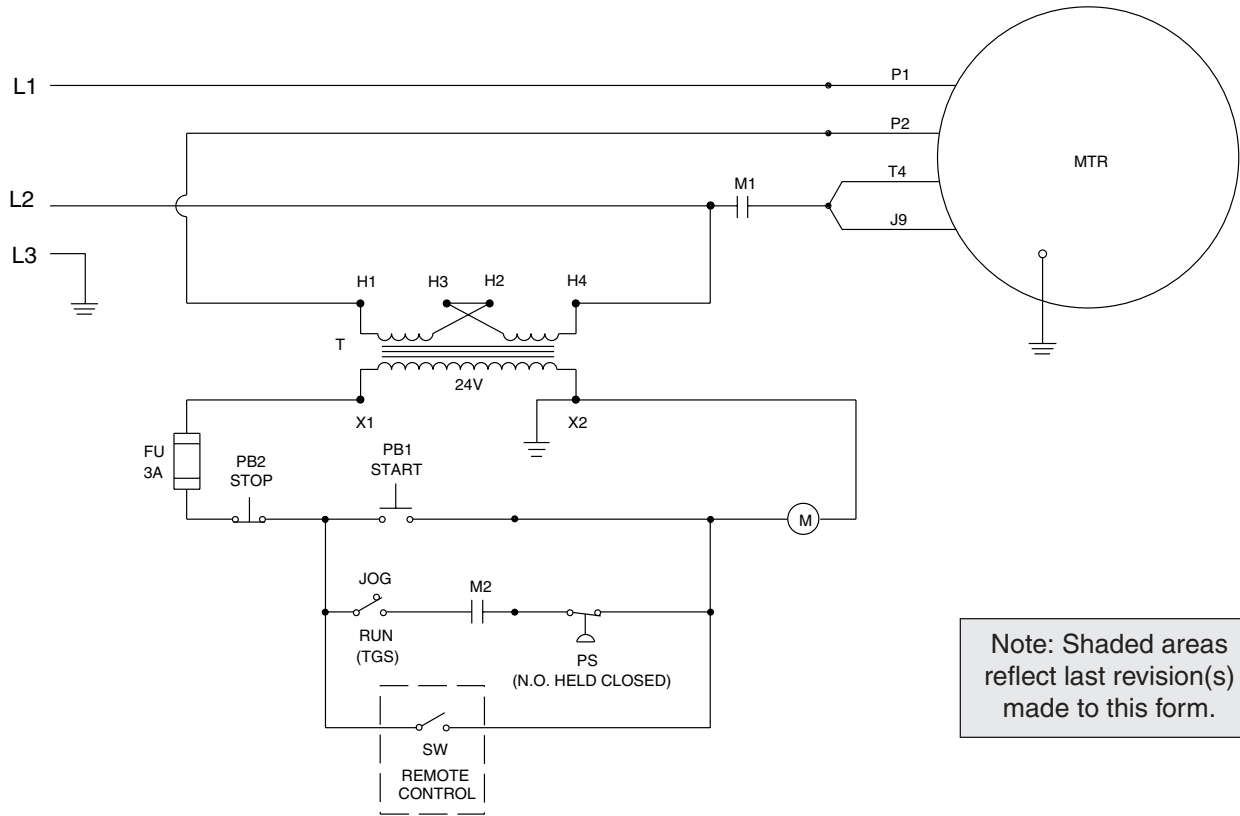

Note: Shaded areas reflect last revision(s) made to this form.