

CombiWell

Sump pump for paint spraying cabins and solvent degreaser units



The best solution to do it well.

The CombiWell is a range of specialised immersion pumps, used in water curtain paint spray booths and solvents degreasing spray units.

PUMP CHARACTERISTICS

- No shaft sealing
- Liquid lubricated slide bearing
- Compact and modular design
- High degree of interchangeability between parts of different pump sizes



Features and *benefits*

LANTERN PIECE

- cast iron
- reducing flanges applied at motor side
- *rigid construction*
- *fits a wide range of electric motors*

BALL BEARING

- located in lantern piece
- grease lubricated
- *easily replaceable*
- *low maintenance costs*

PUMP CASING


- permanently submerged into the liquid
- stainless steel for street cleaning version
- cast iron for paint spray version
- *always ready for action*
- *corrosion resistant*
- *cost effective materials*

SLIDE BEARING



- located in pump cover
- shaft sleeve on shaft
- different type of bearing materials
- *lubricated by the liquid*
- *low maintenance costs*

IMPELLER

- stainless steel for street cleaning version
- cast iron for paint spray version
- fitted with extra large clearance between impeller and pump casing
- *corrosion resistant*
- *cost effective materials*
- *easily replaceable*

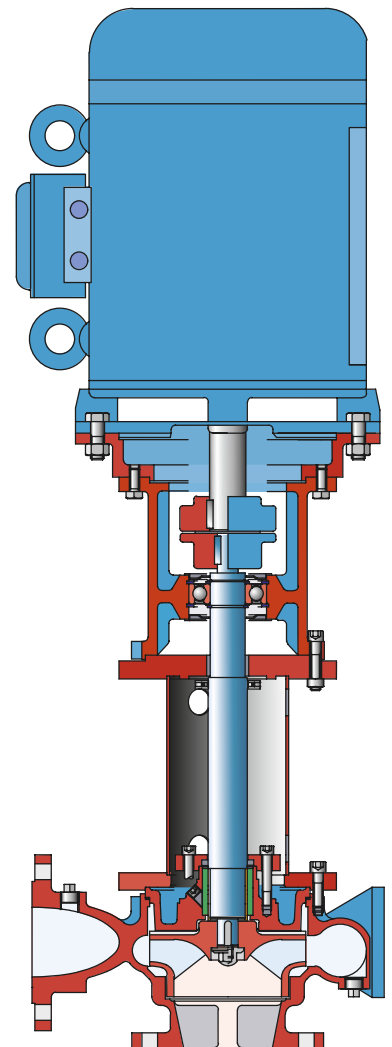

Capacity curves

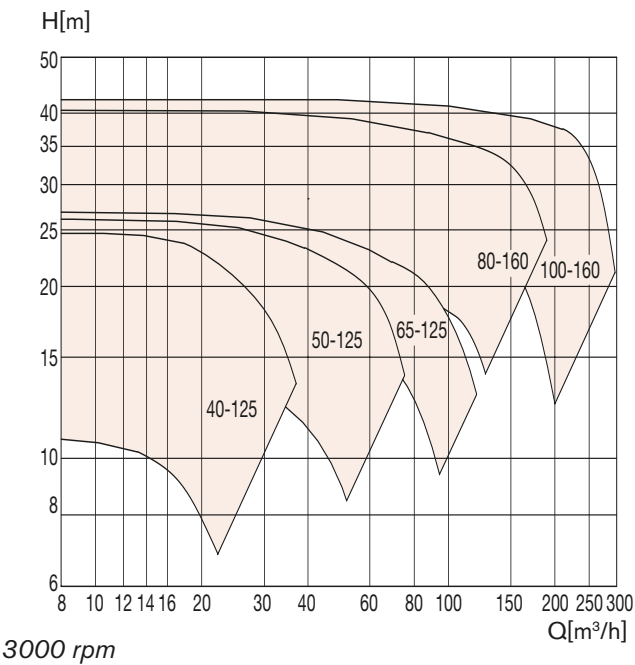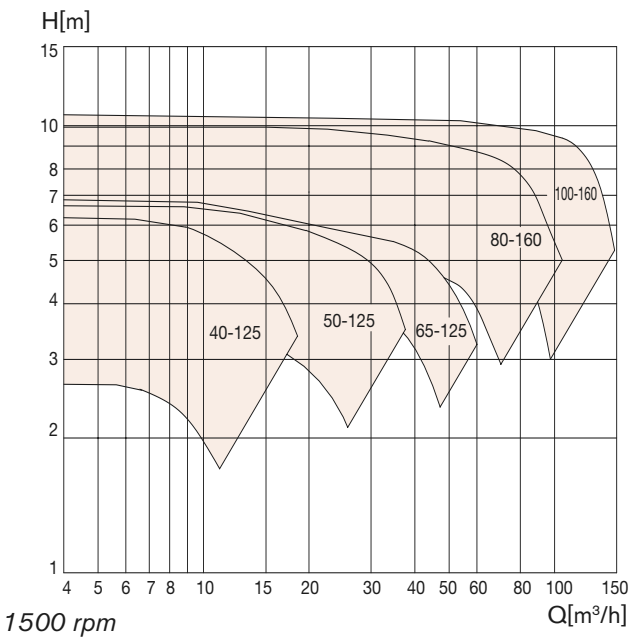

Typical product applications

**WATER CURTAIN PAINT
SPRAY BOOTHS**

**SOLVENTS DEGREASING
SPRAY UNITS**



CombiWell



Sump pump for paint spraying
cabins and solvent degreaser units

Your local contact:

www.spx.com/en/johnson-pump/where-to-buy/

SPX FLOW TECHNOLOGY ASSEN B.V.

Dr. A.F. Philipsweg 51, 9403 AD Assen

P.O. Box 9, 9400 AA Assen, THE NETHERLANDS

P: +31 (0)592 37 67 67

F: +31 (0)592 37 67 60

E: johnson-pump.nl.support@spx.com

SPX reserves the right to incorporate our latest design and material changes without notice or obligation.

Design features, materials of construction and dimensional data, as described in this bulletin, are provided for your information only and should not be relied upon unless confirmed in writing. Please contact your local sales representative for product availability in your region. For more information visit www.spx.com/en/johnson-pump

The green ">" is a trademark of SPX Corporation, Inc..

JP_417_GB Version: 01/2013 Issued: 10/2013

COPYRIGHT © 2008, 2011, 2013 SPX Corporation