





## MODEL C SHUT-OFF VALVE ASSEMBLY

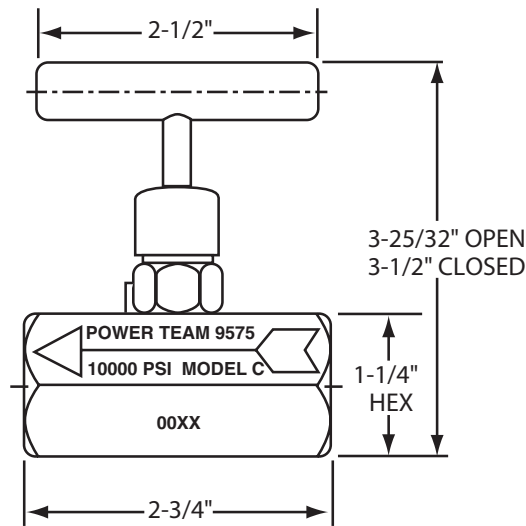

**PORT "A"**

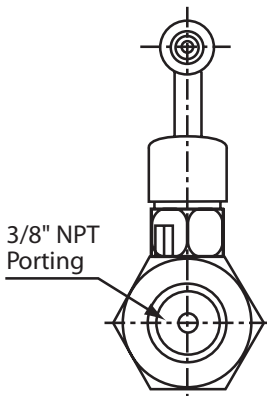

**PORT "B"**

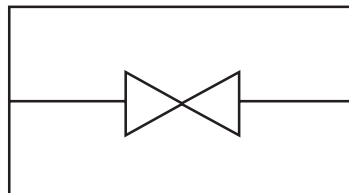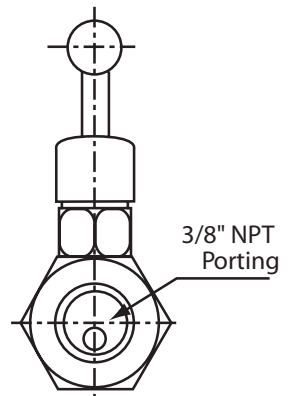

**HYDRAULIC SCHEMATIC**

Shut-off Valve #9575 is designed to be used both as a shut-off device and as an adjustable metering valve. If used as an adjustable metering valve the port connections are unimportant. However, if used as a shut-off valve, best results are achieved if it is plumbed into the system with the side which will see the greatest pressure or the side of the valve which is expected to hold pressure (when the valve is shut off) being towards the back side of the arrow or the end of the valve opposite the arrow point (Port B - see illustration above).