POWER TEAM®

SPX Hydraulic Technologies 5885 11th Street Rockford, IL 61109-3699 USA powerteam.com Tech. Services: (800) 477-8326 Fax: (800) 765-8326


Order Entry: (800) 541-1418 Fax: (800) 288-7031 Parts List for:


P460 P460 Series P460D

P460D Series

MODEL D

TWO-STAGE HYDRAULIC HAND PUMP GENERAL ASSEMBLY

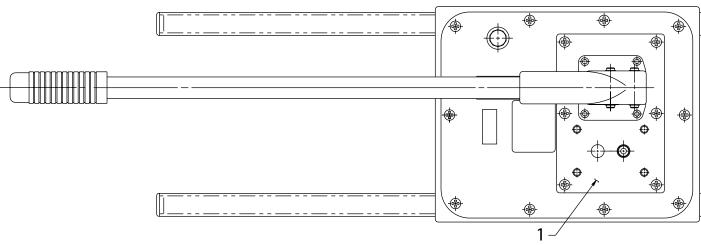

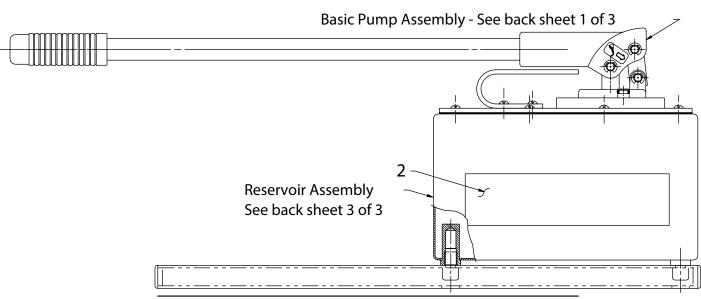

Ite	em	Part	No.	
Ν	lo.	No.	Req'd	Description
	1	420295	1	Valve (3-way; For P460)
		9500	1	Valve (4-way; For P460D; See Form No. 101913)
	2	309219CE	2	Trade Name Decal

PARTS INCLUDED BUT NOT SHOWN


†205724	1	Attention Decal (Viton Seals)
•250328	1	Attention Decal (EPR Seals)
253234	1	Decal (Oil Pivot Pins)

Part numbers marked with a dagger (†) are contained in Viton Seal Repair Nit No. 300812.

Part numbers marked with a bullet (•) are contained in EPR Repair Kit No. 300813.

Sheet No.	1 of 3
Rev. 7	Date: 16 July. 2013

BASIC PUMP ASSEMBLY

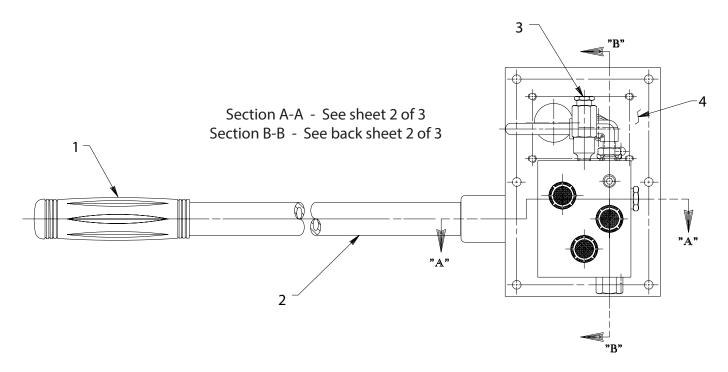


ltem No.	Part No.	No. Req'd	Description
1	11390	1	Flex Grip Handle
2	30708	1	Handle
3	21278	1	Relief Valve Assembly (See note below)
4	420418GY8	1	Cover Plate

NOTE

Standard relief valves are set at 10,100/10,700 PSI.
Relief valves pre-set at special settings are available.
Refer to your pump model number or contact Power Team Technical Services.

Parts List Form No. 101475

SECTION A-A

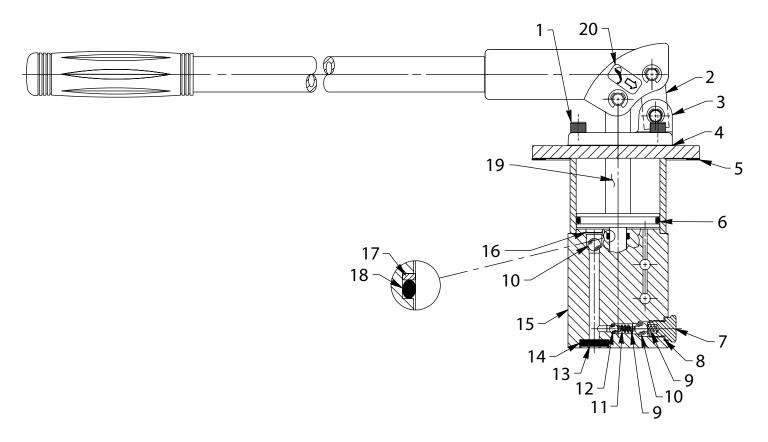


tem No.	Part No.	No. Req'd	Description	ltem No.	Part No.	No. Req'd	Description
1	250671	4	Screw (5/16-24 UNF x 3-1/2 Lg.;	10	•†*10378	3	Steel Ball (3/8 dia.)
			Torque to 240/250 in. lbs.)	11	•†*211797	1	Spring (5/32 O.D. X 5/8 Lg.)
			Note: Torque in increments of	12	•†*10375	1	Steel Ball (1/4 dia.)
_	24.602		100 in. lbs.	13	•†*214586	3	Retaining Ring (Internal)
2	21603	1	Pivot Block	14	•†*214578	3	Filter (Insert screen
3	420978BK2	1	End Cap				with cupped side in.)
4	•†*22143	1	End Cap Gasket	15	64202	1	Pump Body
5	•†*30709	1	Reservoir Gasket	16	•†*250670	2	Retaining Ring
6	*10295	1	O-ring (2-1/2 x 2-1/4 x 1/8; Nitrile)	17	*12389	1	Backup Washer
	†19040	1	O-ring (2-1/2 x 2-1/4 x 1/8; Viton)		•†213987	1	Backup Washer (Assemble with
	•251241	1	O-ring (2-1/2 x 2-1/4 x 1/8; EPR)		12.3307	•	concave surface towards o-ring.)
7	351952	1	Valve Screw	18	*11564	1	O-ring (11/16 X 1/2 X 3/32; Urethane)
			(Torque to 480/500 in. lbs.)	10	†11445	1	O-ring (11/16 X 1/2 X 3/32; Viton)
8	•†*14874	1	Soft Copper Washer		•19406	1	
			(.700 X 1/2 X 1/32)	10		1	O-ring (11/16 X 1/2 X 3/32; EPR)
9	•†*10444	1	Compression Spring	19	253372	1	Piston Assembly
		(3/16 I.D. X 13/32 Lg.)	20	253234	Т	Oil Pivot Pins Decal	

Part numbers marked with an asterisk (*) are contained in Repair Kit No. 300811. Part numbers marked with a dagger (†) are contained in Viton Seal Kit No. 300812. Part numbers marked with a bullet (•) are contained in EPR Seal Kit No. 300813.

Note: Shaded areas reflect last revision(s) made to this form.

Sheet No.	2 of 3
Rev. 7	Date: 16 July. 2013

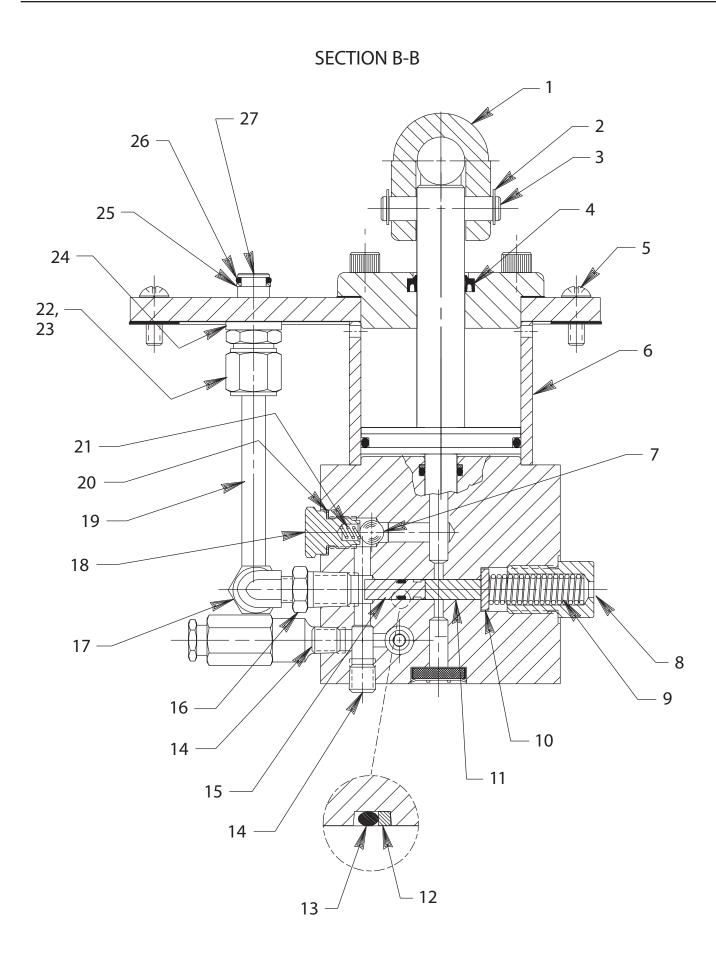

Parts List Form No. 101475


Item	Part	No.	_
No.	No.	Req'd	Description
1	30701	1	Lever
2	11032	6	Retaining Ring
3	21609	3	Clevis Pin
4	*251728	1	Rod Wiper (Nitrile)
	†251729	1	Rod Wiper (Viton)
	•251730	1	Rod Wiper (EPR)
5	10177	6	Machine Screw (1/4-20 UNC X 3/4 Lg.)
6	350302	1	Spacer (Position of holes is to be at the to
7	•†*10378	1	Steel Ball (3/8 dia.)
8	308430	1	Unloading Valve Fitting
9	•†*10367	1	Compression Spring (1/2 O.D. x 2" Lg.)
10	214692	1	Disc
11	250672	1	Dowel Pin
12	•†*15174	1	Backup Ring (5/16 X 3/16 X 3/64)
13	*10265	1	O-ring (5/16 X 3/16 X 1/16; Nitrile)
	†11437	1	O-ring (5/16 X 3/16 X 1/16; Viton)
	•17714	1	O-ring (5/16 X 3/16 X 1/16; EPR)
14	10427	2	Pressure Plug
15	250658	1	Unloading Valve Piston
16	13269	1	Reducer Bushing
17	10475	1	Tube Elbow
18	305975	1	Valve Screw (Torque to 480/500 in. lbs.)
19	350340	1	Oil Line
20	14874	1	Soft Copper Washer (.700 X 1/2 X 1/32
21	•†*10444	1	Compression Spring (3/16 I.D. X 13/32
22	10430	1	Tube Sleeve (3/8)
23	10431	1	Tube Nut (Torque to 40/50 ft. lbs.)
24	21484	1	Spacer
25	•†*11863	1	Backup Washer (1/2 X 3/8 X 1/16)
26	*10268	1	O-ring (1/2 X 3/8 X 1/16; Nitrile)
	†19775	1	O-ring (1/2 X 3/8 X 1/16; Viton)
	•17716	1	O-ring (1/2 X 3/8 X 1/16; EPR)
27	20787	1	Valve Connector (Torque to 20/30 ft. I

Part numbers marked with an asterisk (*) are contained in Repair Kit No. 300811. Part numbers marked with a dagger (†) are contained in Viton Seal Kit No. 300812. Part numbers marked with a bullet (•) are contained in EPR Seal Kit No. 300813.

Note: Shaded areas reflect last revision(s) made to this form.

Sheet No.	3 of 3
Rev. 7	Date: 16 July. 2013

TWO GALLON RESERVOIR ASSEMBLY

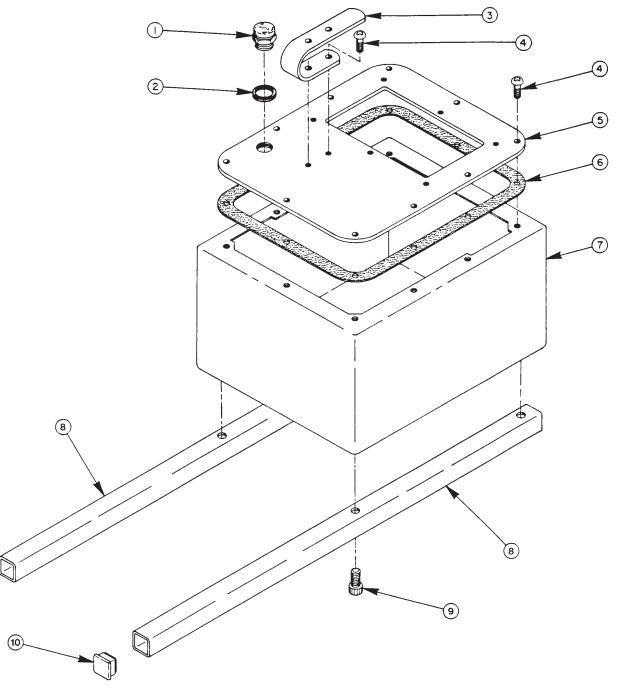

Item No.	Part No.	No. Req'd	Description	Item No.	Part No.	No. Req'd	Description
1 2	251689 *200415 †18999	1 1 1	Filler/Vent Cap O-ring (.81 x .62 Nitrile) O-ring (.81 x .62 Viton)	6	47409	1	Cover Gasket (Assemble gasket [with adhesive in contact with reservoir]. Apply Permatex [or equiv.] between gasket and cover plate.)
3	•250157 24066	1 1	O-ring (.81 x .62 EPR) Handle (Apply Permatex [or equiv.] between handle and cover plate.)	7 8	40063OR9 307569	_	Reservoir Support Tube
4 5	10177 41810WH2	12 1	Machine Screw (1/4-20 UNC x 3/4 Lg.) Cover Plate	9 10	213836 12126	-	Soc. Hd. Cap Screw Plastic Tube Insert

Part numbers marked with an asterisk (*) are contained in Repair Kit No. 300811. Part numbers marked with a dagger (†) are contained in Viton Seal Kit No. 300812. Part numbers marked with a bullet (•) are contained in EPR Seal Kit No. 300813.