


ACCESSORIES

Cribbing Blocks




Convert Power Team “Shorty” cylinders to mechanical cribbing devices; more stable and safe than timber or other awkward, makeshift methods. Ideal for lifting applications such as structure moving. Reduces cribbing time dramatically. In effect, increases the stroke of the cylinder; stacking pads act as cylinder extensions:

1. Extend cylinder and insert lower supporting ring.
2. Retract cylinder, insert a stacking pad.
3. Extend cylinder again; pad increases cylinder stroke.
4. Repeat process until all rings and pads are used.

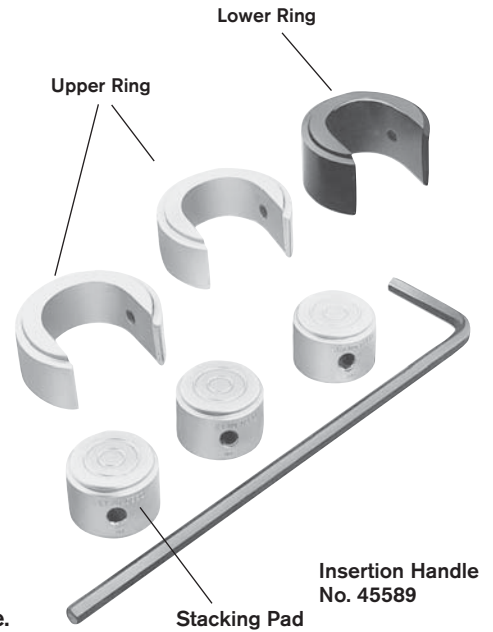

Each cribbing block set includes rings, pads and insertion handle.

- No. **CB30** – Cribbing block set for use with No. RSS302; 30 ton cylinder.
- No. **CB50** – Cribbing block set for use with No. RSS502; 50 ton cylinder.
- No. **CB100** – Cribbing block set for use with No. RSS1002; 100 ton cylinder.
- No. **45589** – Insertion handle is used for inserting rings and pads.

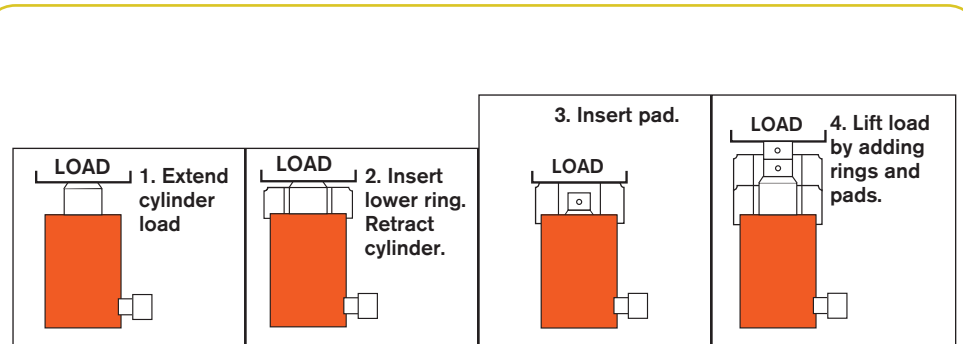

| FOR USE WITH ORDER NUMBER | 30 TON CYLINDER NO. RSS302 30 TON SET NO. CB30 | | | 50 TON CYLINDER NO. RSS502 50 TON SET NO. CB50 | | | 100 TON CYLINDER NO. RSS1002 100 TON SET NO. CB100 | | |
|-----------------------------------|---|---------------------------------|---------------------------------|---|---------------------------------|---------------------------------|---|---------------------------------|---------------------------------|
| | Lower Ring | Upper Ring | Stacking Pad | Lower Ring | Upper Ring | Stacking Pad | Lower Ring | Upper Ring | Stacking Pad |
| No. included in set | 1 | 2 | 3 | 1 | 2 | 3 | 1 | 3 | 4 |
| Outside Diameter (in.) | 4 ¹ / ₂ | 4 ¹ / ₂ | 2 ³ / ₄ | 5 ¹ / ₂ | 5 ¹ / ₂ | 3 ³ / ₈ | 7 ²⁵ / ₆₄ | 7 ²⁵ / ₆₄ | 4 ³ / ₄ |
| Inside Diameter (in.) | 2 ¹³ / ₁₆ | 2 ¹³ / ₁₆ | — | 3 ²⁹ / ₆₄ | 3 ²⁹ / ₆₄ | — | 4 ¹³ / ₁₆ | 4 ¹³ / ₁₆ | — |
| Height, each (in.) | 2 ⁹ / ₃₂ | 1 ⁵¹ / ₆₄ | 1 ²⁵ / ₃₂ | 2 ⁷ / ₃₂ | 1 ²³ / ₃₂ | 1 ¹¹ / ₁₆ | 2 ¹ / ₈ | 1 ³ / ₄ | 1 ²³ / ₃₂ |
| Diameter (in.) rings in Set (in.) | 4 ¹ / ₂ | | — | 4 ³ / ₁₆ | | — | 6 ⁷ / ₈ | | — |
| Weight of Set (lbs.) | 20 | | | 28 | | | 64 | | |

Each set includes one Insertion Handle No. 45589 - 1/2" Hex. x 18" Long, 4" Bend