AIR PUMP

PA46/55 Series


Up to 150 ton 46-55 cu. in./min. Two Speed


ROTARY-STYLE AIR MOTOR. USE WHERE AIR IS THE PRE-FERRED SOURCE OF ENERGY.

- 3 hp motor starting under full load.
- Two-speed operation for rapid cylinder advance.
- Models available with full remote control over advance and return, (except PA554).
- Tandem center valve holds the load when pump is shut off.





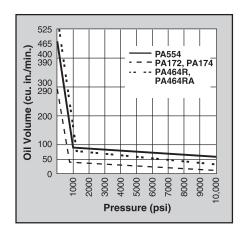

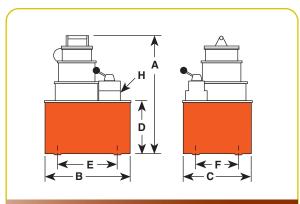



PA554 pump and RH2008 Center Hole cylinder used to tension cables.

								Max. Pressure		Oil De	min. @))	
Pump No.	A (in.)	B (in.)	C (in.)	D (in.)	E (in.)	F (in.)	H (in.)	Output (psi)	0 (psi)	100 (psi)	1,000 (psi)	5,000 (psi)	10,000 (psi)
PA462	15	111/,	91/0	7	10	8	% NPTF	10,000	465	450	53	51	46
PA464	15	111/,	91/2	7	10	8	³/₂ NPTF	10,000	465	450	53	51	46
PA464R	15	111/2	91/2	7	10	8	³/ ₈ NPTF	10,000	465	450	53	51	46
PA464RA	15	111/2	91/2	7	10	8	³ / ₈ NPTF	10,000	465	450	53	51	46
PA554	19	111/2	91/2	7	10	8	³ / ₈ NPTF	10,000	465	450	80	70	55


^{*} Typical flow delivery. Actual flow will vary with field conditions.


Note: Four mounting holes 1/2" - 20







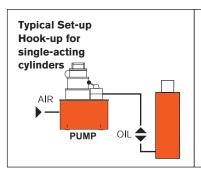

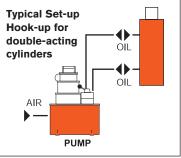

For use with Cyl. Type	Description	Order No.	Valve No.	Valve Function	Air Supply Req'd (psi)	Rese Cap. (gal.)	ervoir Usable (cu. in.)	Prod. Wt (lbs.)
Single-Acting	Base model pump with 21/2 gallon	PA462	9584,	Advance/	40-120	21/2	590	60
0 0	steel reservoir.		2-way	Hold/Return		2		
Single and	PA462, except has 9500 valve	PA464	9500,	Advance/	40-120	21/2	590	61
Double-Acting	capable of running 2 single-acting		4-way	Hold/Return*		-		
	cylinders or one double-acting cylinder.							
Single and	PA462 with air actuated valve for full	PA464R†	9594,	Advance/	40-120	21/2	590	78
Double-Acting	remote control over advance and		4-way	Hold/Return				
	return. Includes 12 ft. remote control.							
Single and	PA464R except, has automatic	PA464RA*†	9594,	Advance/	40-120	21/2	590	79
Double-Acting	dump feature. 25 ft. remote control.		4-way	Hold/Return*		_		
Single and	High performance pump with	PA554	9500,	Advance/	40-120	21/2	525	72
Double-Acting	2 ¹ / ₂ gallon steel reservoir.		4-way	Hold/Return*		_		

Note: Requires 50 cfm at 80 psi shop air pressure at the pump. dBA 85/90 at 10,000 psi.

^{*} Holds when motor is shut-off and valve is in "advance" position.

The PA464RA has an "automatic dump" feature. Pressure is not held when operator releases "advance" or "return" button. PA464R will "hold" only in the "advance" position with the motor shut off.

^{**} Not to be used for lifting.