

CRIMPING PUMP


Electric PE-Nut

30 cu. in./min Two-Speed

EXTREMELY DURABLE YET LIGHT-WEIGHT AND OPERATE UNDER LOW-LINE VOLTAGE CONDITIONS.

PE-NUT PUMP — 115V

- 5/8 hp universal electric motor (50/60 Hz cycle).
- Two-stage pump for rapid ram advance.
- Operational under low-line voltage conditions.
- Optional operating pressures available; consult Power Team for details.
- Designed for use with spring-returned remote tools.
- High-pressure safety relief valve.
- Remote hand control with 10-foot cord.
- Carrying handle.
- Factory filled oil reservoir.
- Pressure matched quick-coupler supplied.
- Optional carrying case.
- Unique, intermittent duty pump.
- Piston-type high-pressure pump supercharged by a low-pressure pump.

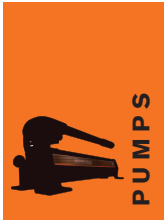

⚠ CAUTION: DESIGNED FOR CRIMPING APPLICATIONS ONLY! This system should not be used for lifting.

Order No.	Oil Deliver (cu. in./min.)	Oil Reservoir (cu. in.)	Usable Oil (cu. in.)	Overall Width (in.)	Overall Length (in.)	Overall Depth (in.)	Pump Weight w/Oil (lbs.)
PE-NUT	160 in ³ @ 100 psi	93 in ³	43 in ³	6.5	14.38	8.25	28
PE-NUTC*	30 in ³ @ 10,000 psi						

*Includes Case

Electric Motor	Electrical Data	Electrical Control
5/8 hp, 10,000 rpm 115V AC, 50/60 Hz 11 amp current draw (115V @ 10,000 PSI)		Remote control with 10-foot cord