

COUPLERS

Standard And Flush-Face



9795 Cylinder and
Hose Couplers



9796



9798



9794 No-Spill
Hose Couplers Set



9793

9792



9797



9799



9800



CYLINDER AND HOSE COUPLERS

Designed for use up to 10,000 psi with hydraulic jacks, cylinders, etc. They are the threaded union type for interchanging cylinders in seconds. Each half is valved with a precision ball for a tight shutoff when disconnected. These couplers also permit the separation of cylinders or hose from pump when at 0 psi with minimal oil loss.

No. 9795 – Complete quick coupler, $\frac{3}{8}$ " NPTF. (Includes two 9800 dust caps).

No. 9798 – Male (hose) half coupler $\frac{3}{8}$ " NPTF.

No. 9796 – Female (cylinder) half coupler with No. 9800 dust cap, $\frac{3}{8}$ " NPTF.

No. 9796-V – Same as 9796, but with Viton seals.

No. 9796-E – Same as 9796, but with EPR seals.

No. 9799 – Optional metal dust cap (hose half).

No. 9797 – Optional metal dust cap (cylinder half).

NO-SPILL, PUSH-TO-CONNECT HYDRAULIC HOSE COUPLERS

Designed to permit high oil flow, the no-spill, push-to-connect couplers with locking collar and flush face design are for high pressure applications. The flush-face concept makes it easy to clean both coupler ends before connecting. Our unique push-to-connect, "dry-break" design eliminates oil spillage. The locking collar makes accidental disconnects a thing of the past. For 10,000 psi operation.

No. 9792 – Female (cylinder) half quick coupler only. Wt., 0.3 lb.

No. 9793 – Male (hose) half quick coupler only. Wt., 0.3 lb.

No. 9794 – Complete quick coupler (male and female). Dust caps not included. Wt., 0.5 lb.

HYDRAULIC COUPLER DUST CAP


Dust cap fits either male or female half couplers.

No. 9800 – Dust cap. For male or female $\frac{3}{8}$ " NPTF half couplers. Wt., 0.3 lb.


HAND PUMP System With Connections

Hand pump system hook-up


(T-adapter necessary for P12, P19, P23, P59 & P59F pumps. All other hand pumps have a gauge mounting port.)

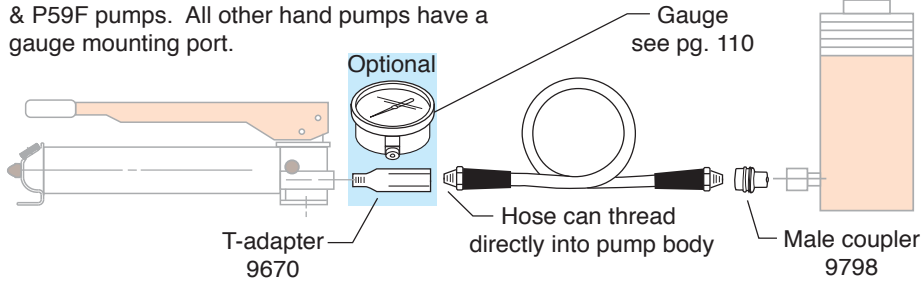

Single-acting air pump system hook-up

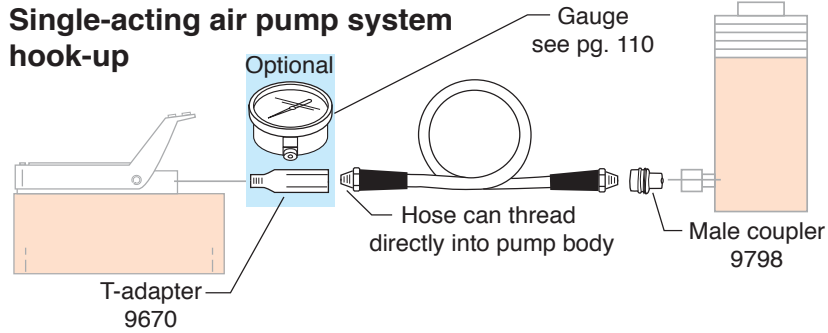

Air, Electric & Gas Pumps with valve system hook-up

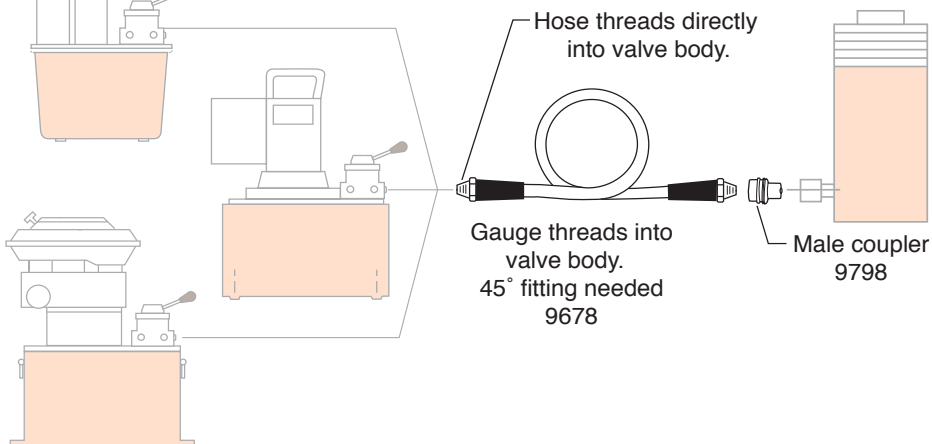

ACCESSORIES

